

## Instruction Manual

### ( I ) Time setting:

Under normal mode, long press the “time” key to enter the “Hour” setting, Short press “+,-” button, will increase or decrease the digits. Then press “Time” key, to enter “Minute” setting, short press “+,-” button, will increase or decrease the digits, finally press “time” key to exit and save the setting.

**Note:** 1. During the setting, if there is not any operation, the setting will be saved automatically and exit after 10s. 2. “during the setting, long press the “+,-” key will fast change the digits. 3. Under the normal mode, short press the “time” key will switch the time format 12/24h mode.

### ( II ) Date setting :

Under normal time mode, long press “date” key, to enter date setting, time position will display Year 2023 and keep flashing, now short press “+,-” will increase or decrease the digits, after adjusted to what values you want, then press “date” key again to enter Month setting and month position will keep flashing, press “+,-” button to change the values, then press “date” key again to enter Day setting and day position will keep flashing, press “+,-” button to change the values, finally press “date” key to exit and save the setting.

**Note:** 1. During the setting, if there is not any operation, the setting will be saved automatically and exit after 10s. 2. “during the setting, long press the “+,-” key will fast change the digits. 3. There is no need to set the day of week.

### Week display:

MON TUE WED THU FRI SAT SUN

### ( III ) Alarm setting:

1、Open Alarm(check alarm): Under normal display mode, short press “Alarm” key to open alarm function and check the alarm time, and it will display 5s and then exit the alarm display, within the 5s user can press any button except the alarm button to return time display mode.

2、Close Alarm: When Alarm is on, short press Alarm key to close alarm, and the icon of alarm will disappear.

3、Alarm time setting: When Alarm is on, long press the Alarm key, “hour” of alarm will flash, press “+,-” to change the values of “hour” and “minute”, finally press “alarm” key to exit and save the setting.

4、Close the alarm: When alarm is working, if there is not any operation, the alarm sound will auto closed after 3 min. Press any button can close the alarm sound.

(IV) Temperature unit switch:

1. When display temperature, short press “+” button can switch °C and °F. Default display is °C

2. Short press “-” button to select display mode:

1. Display week only  
DAY  
FRI

2. Display temperature only  
TEMP  
22°C

3. Week and temperature display 10s/time  
DAY ° TEMP  
FRI


3. Temperature range : 0~50°C  
Temperature under 0°C will display LI°C

DAY ° TEMP  
LI°C

Temperature above 50°C will display Hh°C  
DAY ° TEMP  
Hh°C

(V) DST function:

1. The time will auto increase 1 hour ,on the first Sunday in March , and will auto decrease 1 hour ,on the first Sunday in November every year . In the meanwhile , the icon “Auto DST” will display on .

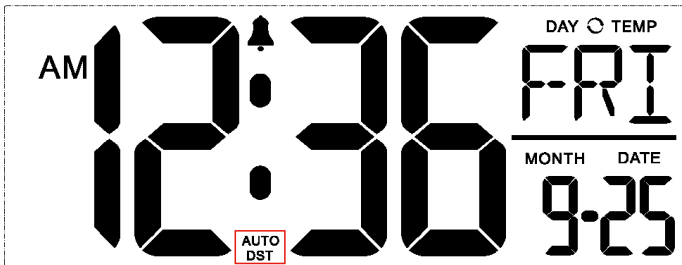

2. Except that period, the icon “Auto DST” will display off.