

## **DIRECTIONS FOR USE**

- Slide switch to **ON** position to turn on the lantern.
- Slide switch to **OFF** position to turn off completely.

Requires (2) C Batteries (Not Included).

## **LANTERN CARE**

Only use indoor, only use in dry environment.

Do not use it if the product is damaged.

Please note: The color intensity and shade may vary from lantern to lantern. Due to various environmental factors the color may change or fade over time.

## **WARNING:**

- **CHOKING HAZARD** – small parts. Batteries hazardous if swallowed. Keep batteries away from children. This product is not a toy.
- **DO NOT** attempt to open any part of product except to replace batteries.
- Ensure battery contacts are clean and free of debris.
- Install batteries according to correct polarity (+/-).
- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Remove batteries when consumed or when product is not in use for an extended period of time.
- Batteries must be recycled or disposed of properly, in accordance with all state and local regulations. **DO NOT** crush, puncture, or incinerate.